



Features

- Easily expandable
- Two supervised audible circuits
- Lamp and system trouble circuit test
- Ground fault detection
- Initiating device circuit (IDC) alarm test
- Monitors up to 3,500 feet (1,067m) of Protectowire Linear Heat Detector per zone
- Up to 30 smoke detectors per zone
- Compatible with Protectowire TRI-Wire™ Dual Temperature Linear Heat Detector with Pre-Alarm

FireSystem 2000 Commercial and Light Industrial Fire Alarm Control Panel

Description

The FireSystem 2000 is a fully supervised, non-coded fire alarm control panel available in multiple zone configurations. The control panels are modular in design and feature individual control modules designed to meet specialized system requirements for commercial, institutional, and light industrial applications. The system is both UL listed and FM approved and conforms to applicable NFPA 72 requirements for local and auxiliary protective signaling systems. It may also be used as part of a proprietary fire alarm system or, when properly configured, is capable of sprinkler supervisory service, water flow alarm, preaction sprinkler or deluge system release.

The basic 2-wire system control panel and its associated power supply provide the following standard features: two supervised detection circuits, which may be field wired for either Class A (Style D) or Class B (Style B); two supervised Class B (Styles W & Y) audible signal circuits; battery charger and monitor; ground fault detection; lamp test; one set of SPDT common alarm contacts, and two sets of SPDT common trouble contacts.



AN ISO 9001 REGISTERED COMPANY

Flexibility

The basic 2000 Series Control Panel is designed for easy expansion of system capability by adding additional modules and functions to the standard system. The 2000 will accommodate a combination of the following options:


- Protectowire alarm point location meter
- Extinguishing system release and supervision
- Water flow detection
- Fire and non-fire supervisory monitoring
- Intrinsically safe detection zones
- Municipal tie
- Supplementary relays

A complete list of available options is included in the “System Configuration Guide” section of this catalog sheet.


System Expansion

The basic 2-wire control unit consists of two (2) detection zones, and requires one module space in the system enclosure. The zone capacity of the basic system can be expanded up to a maximum of forty-six (46) zones in one EN12 enclosure, by utilizing the required number of plug-in zone modules and their associated EB-91 zone expander boards. Each standard 2-wire zone module requires a half module space in the system enclosure and contains two (2) individual detection circuits. To monitor the two detection circuits, a red LED zone alarm indicator and a yellow zone trouble indicator are supplied for each zone. Supervisory zone cards utilize two yellow LED indicators per zone to indicate supervisory alarm and supervisory trouble.

The modular system design enables the system to be modified at any time. The required number of input and output circuits and system options are custom assembled and tested at the factory to ensure exact conformance with the customer’s application requirements.

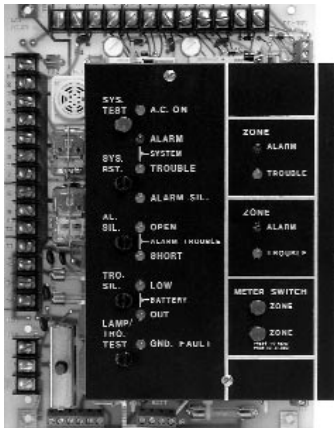

FS2000 Basic control module

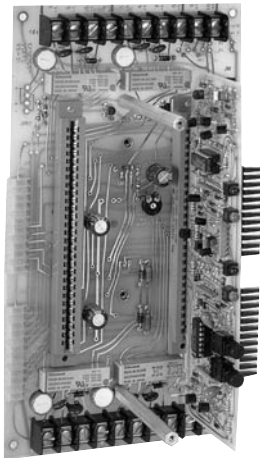

Zone expander board (EB-91) with one plug-in zone module

System Features

Nine system status indicators are mounted on the main control board. A green POWER ON LED, a red SYSTEM ALARM LED, a yellow SYSTEM TROUBLE/SUPERVISORY signal LED, and a yellow GROUND FAULT indicator. Additional yellow indicating LED’s are provided for ALARM SILENCED, AUDIBLE SIGNAL CIRCUITS OPEN/SHORTED, BATTERY LOW and BATTERY OUT.

System controls consist of five push button switches which provide the following functions: System Test, System Reset, Alarm Silence, Trouble Silence, and Lamp and Trouble Test.

Protectowire Alarm Point Location Meter (Option A) and Scanner (Options B, C & C2)

Protectowire introduces “smart” detector technology to Linear Heat Detectors. The PDM-1000-1 Meter (Option A) may be built into the 2000 Series Control Panel to locate a heat actuated point on the Protectowire Linear Heat Detector. The meter will display the distance in feet or meters from the start of the Detector portion of the zone to the overheated or actuated point on the Protectowire Linear Heat Detector.

A Zone Alarm Scanner option for the PDM-1000-1 is available which allows for automatic identification and display of the Protectowire zone in alarm, as well as the alarm point distance location, while still monitoring the remaining Protectowire zones for an alarm condition. The Scanner is available in the following configurations: 8 zones (Option B), 16 zones (Option C), and 32 zones (Option C2).



PDM-1000-1 Protectowire alarm point location meter with 16 zone alarm scanner. (Options A & C)

Solenoid Monitor and Release Module (Options G & GG)

The RS-91 Series Solenoid Monitor and Release Modules are designed to operate and supervise solenoid valves used for the actuation of extinguishing systems.


Release logic and subsequent activation of the module is governed by the appropriate detection zone module(s) in the 2000 Series Control Panel. When the alarm signal is transferred to the release module(s), a 24VDC output is initiated to operate the normally de-energized solenoid, which activates the extinguishing agent release sequence.

The release circuits are supervised for open and shorted conditions. In the case of an open or short, the system trouble buzzer will sound and the appropriate yellow indicating LED will illuminate. A circuit disconnect switch is also provided to deactivate the module during servicing of the system.

The release module is available in two versions. Option G (RS-91) contains two (2) independent 24VDC release circuits plus two (2) Class B switch supervisory circuits. The RS-91 release module requires one (1) module space in the system enclosure and has

been approved by Factory Mutual Research Corporation for actuation of FM Solenoid Groups A, B,D, E, F and G.

Option GG (RS-91D), is available for those applications which require operation of the Star Model D deluge valve. This model contains two (2) release circuits and two (2) Class B supervisory circuits, and requires one (1) module space in the system enclosure. Option GG (RS-91D) is the only model which has been FM Approved for operation of the Star Model D deluge valve, FM Solenoid Group C.

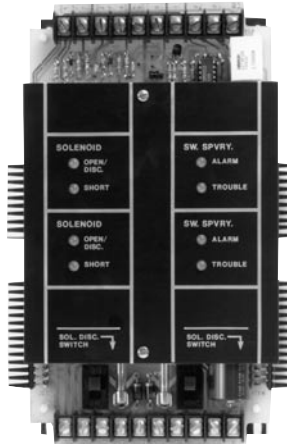

Solenoid monitor and release module with Class B supervisory circuits. (Options G & GG)

Intrinsically Safe Detection Circuits (Options H, J, & K)

The 2000 Series can be provided with intrinsically safe Class B detection circuits for those areas that are classified as hazardous. The voltage and current in the detection circuits will be limited to values which are incapable of causing an explosion in a Division 1 area. Protectowire Linear Heat Detector and/or other non-energy storing initiating devices may be used in these areas. Three FM Approved options are currently offered for the 2000 Series Control Panels:

Option H utilizes a shunt diode barrier and has been FM Approved for NEC Classes I, II, and III, Division 1, Groups A, B, C, D, E, F, and G. This option permits the use of the Protectowire alarm point location meter (Option A) but requires that the system ground fault detection circuit be disabled.

Option J is used exclusively with TRI-Wire detection zones and provides two shunt diode barriers per zone. This option is FM Approved for NEC Classes I, II, and III, Division 1, Groups C, D, E, F and G. Option J is compatible with the Protectowire Alarm Point Location Meter (Option A), but requires that the system ground fault detection circuit be disabled.

Option K incorporates a DC isolator as part of the detection circuit. This method is FM Approved for NEC Classes I, II, and III, Division 1, Groups A, B, C, D, E, F, and G. The use of Option K permits the utilization of the system ground fault detection circuit for all other non-isolated system circuits, but is not compatible with the Protectowire Alarm Point Location Meter (Option A).

Note: Option K is not FM Approved for use with TRI-Wire detection zones (Option X).

Battery Charging Meters (Option P)

Battery Charging Meters (Option P) consist of a DC volt meter and DC amp meter which provide a numerical indication of the system's

battery condition. These meters provide an accurate display of both the charging current draw and the battery standby voltage level.

Option P is side wall mounted inside the enclosure, and may be viewed only when the enclosure door is opened.

Audible Alarm Circuits (Options T & U)

Each 2000 Series Control Panel contains two standard Class B (Styles W & Y) general alarm circuits which are contained on the main control board. These audible circuits may be wired in a Class A (Styles X & Z) configuration when Option T is ordered.

Additional audible alarm circuits may be added to the system by utilizing AE-91 Audible Expander Modules (Option U). Each module provides one (1) audible alarm signaling circuit which may be wired in either a Class A (Styles X & Z) or Class B (Styles W & Y) configuration. These plug-in modules may be provided in a latching or non-latching mode and will also accept up to four (4) inputs for selective activation by zone or groups of zones. Option U requires half a module space in the system enclosure, and the total circuit load may not exceed 1.0 amp.

Zone Voting Module (Option V)

The ZV-91 Zone Voting Module (Option V) is designed to offer selective/multiple circuit activation from a variety of initiating circuits, depending on the operational logic to be achieved upon system operation.

The ZV-91 contains a programmable resistor network which will accept up to 16 input signals. The 16 inputs are arranged into four (4) groups of four (4) with each group capable of providing a designated output signal (total 4). When used in a voting zone format, the module inputs can be selectively programmed to provide an output signal upon activation of any two or three of the 16 inputs. When a cross-zoned configuration is required, the module will accept a maximum of eight (8) inputs or zones, and can provide up to a maximum of four (4) separate outputs.

The module provides excellent system versatility in control function logic. Typical application examples are: actuation of selected relays from the operation of two or more independent initiating circuits; activating an AE-91 Audible Expander Module from a number of select initiating device circuits; and cross-zoning of initiating device circuits and/or supervisory circuits. The ZV-91 is designed for mounting on the sidewall of the enclosure, and does not require a designated module space when sizing the system enclosure.

Auxiliary Power Supply (Option W)

The PS-91 Auxiliary Power Supply (Option W) is a step-down transformer and bridge rectifier designed to increase the system power of any 2000 Series Control Panel. The PS-91 supplies additional full wave rectified power for detection zones, solenoid release circuits, auxiliary audible circuits, alarm relays, or other high power demand devices which may exceed the capacity of the system's main power supply.

The unit is completely supervised. Should the PS-91 fail, a trouble signal illuminates the on-board trouble LED, and allows the battery back-up source to supply the panel with the necessary power. The PS-91 operates on primary AC power of 120VAC, 50-60Hz at 1.75 amps maximum, and provides 5.0 amps of DC power under alarm conditions.

Dual Temperature Detection Zones for use with Protectowire TRI-Wire™ Linear Heat Detector (Options X & XX)

Option X, Class B (Style B)

Option X consists of a ZC-95 plug-in zone module, which provides two (2) independent Class B (Style B) dual input detection zones

along with signal processing circuitry. Each detection zone will accommodate up to 5,000 feet (1,524m) of Protectowire Type TRI, 3-wire Dual Temperature Linear Heat Detector (TRI-Wire™). This module senses two alarm trip levels. The first level operates on a low temperature pre-alarm input signal, and the second level is activated by a high temperature alarm signal. In addition to a common alarm output signal, the module provides an auxiliary pre-alarm (low temperature) output signal and an auxiliary confirmed temperature output signal which is initiated only after both the low temperature pre-alarm and high temperature alarm signals have been activated.

Option XX, Class A (Style D)

When using Protectowire Type TRI, 3-wire Dual Temperature Linear Heat Detector (TRI-Wire™), Class A (Style D) detection circuits are configured by utilizing a version of the system's ZC-91 series plug-in zone module. Designated Option XX, each module provides one (1) 3-wire Class A (Style D) detection zone which will operate up to 3,500 feet (1,067m) of Dual Temperature TRI-Wire™. In this configuration, the module provides a separate trouble and alarm indication for both low temperature pre-alarm and high temperature alarm, as well as separate alarm outputs for both activations. Unlike Option X, a confirmed temperature output signal is not available directly from the zone module. With this option, a confirmed temperature alarm signal is only available by using zone operated relays or a Zone Voting Module (Option V) as part of the system configuration.

When either Option X or XX is ordered with the Protectowire Alarm Point Location Meter (Option A), each zone will cause the meter to display in feet or meters, the location of the heat actuated low temperature pre-alarm point on the TRI-Wire™ Linear Heat Detector.

Power Conditioning Module (Option Y)

The PS-95 Power Conditioning Module (Option Y) is designed to provide filtered, regulated DC power from unfiltered, unregulated DC power sources. When 24VDC input power for the PS-95 is taken from the proper point on the control panel, battery backup is provided automatically to devices powered by the module. When operating on battery backup, the PS-95's unique design prevents any voltage drop from occurring across the module.

The PS-95 features an AC-ON green LED indicator and a BACK-UP ON yellow LED indicator. Reset can be accomplished by utilizing the main panel system reset switch or the push button switch located on the module. Provision has also been made to accept a N/O switch connection for remote reset capability.

The module has a current output of 1.5 A @ 26VDC at idle, and 2.0 A @ 26VDC during alarm. Output voltage is factory calibrated at 25.5 to 26VDC.

System Enclosures

EN Series – Type 1

The EN Series System Enclosures are designed to accommodate all input and output modules, power supplies, and batteries (up to 18AH) utilized in the FireSystem 2000.

Each enclosure consists of a back box and door, fabricated of heavy gauge steel and finished in a fine textured beige epoxy enamel finish. The enclosure door, which is mounted on heavy duty sag-resistant hinges, is fitted with a key lock, and may be removed from the back box to permit easy installation and service. Red enclosures are optionally available and may be ordered by adding the suffix "R" to the enclosure model number.

Each enclosure is vented, which allows for internal placement of the emergency standby batteries. The largest battery supplied by the factory, which may be installed in each model enclosure is indicated in the chart below. When the system's battery size requirements exceed the sizes shown, a separately ordered battery cabinet is required. Consult factory for information.

| Encl. | Module spaces | Max. battery size | Width Inches (cm) | Height Inches (cm) | Depth Inches (cm) |
|-------|---------------|-------------------|-------------------|--------------------|-------------------|
| EN2 | 2 | 10AH | 21" (53.3) | 17" (43.2) | 5" (12.7) |
| EN4 | 4 | 18AH | 21" (53.3) | 31" (78.7) | 5" (12.7) |
| EN6 | 6 | 18AH | 26" (66.0) | 31" (78.7) | 5" (12.7) |
| EN9 | 9 | 18AH | 26" (66.0) | 42" (106.7) | 5" (12.7) |
| EN12 | 12 | 18AH | 26" (66.0) | 53" (134.6) | 5" (12.7) |

LTi Industrial Series — NEMA Type 4/12 & 4X

The LTi Series Enclosures are intended for use indoors or outdoors and are designed primarily to provide a degree of protection against windblown dust and rain, splashing water, hose-directed water, and damage from external condensation. To prevent the build-up of dangerous battery gases within the sealed enclosure, a separately ordered battery cabinet is required. For additional information on LTi Enclosures, refer to Data Sheet 9130.

| Encl. Model | Module Spaces | Width Inches (cm) | Height Inches (cm) | Depth Inches (cm) | Encl. Color |
|-------------|---------------|-------------------|--------------------|-------------------|-------------|
| LTi2X | 2 | 19.5" (49.5) | 17.5" (44.5) | 9.0" (22.9) | Red |
| LTi4 | 4 | 24.0" (70.0) | 34.0" (86.4) | 6.9" (17.4) | Red |
| LTi6 | 6 | 29.0" (73.7) | 34.0" (86.4) | 6.9" (17.4) | Red |
| LTi9 | 9 | 29.0" (73.7) | 45.0" (114.3) | 6.9" (17.4) | Red |

FireSystem 2000 Specifications

AC Supply

120 or 240VAC, 50-60Hz, 1.75 amp max.

Battery Supply

24VDC 4.5-55 ampere hour.

Gel cell (standard)

Nickel cadmium (special order)

Environmental Operation Conditions

Ambient temperature: 32°-120°F (0°-49°C).

Humidity: Max. 95% non-condensing.

Primary System Power

24V FWR by TI, 175VA typical.

System Regulated Power

Each board (MB, EB, RS) has full voltage regulation, 12VDC and 24VDC.

Audible Signaling Device Circuits

24V - FWR with battery standby.

Maximum current: 2 amp/circuit, 3 amp combined.

Requires polarized audible devices.

Relay Contact Ratings

Common alarm: 3 amp @ 30VDC.

Common trouble: 2 amp @ 30VDC.

Approvals*

- UL listed • City of New York #MEA-374-91E
- Factory Mutual • Calif. State Fire Marshal #7165-0854:103

How To Order

Determine the type of system configuration required from the descriptions below and follow the appropriate ordering instructions:

Configuration 1 System will contain all Dual Temperature 3-wire Detection Zones.

Step 1 Order Basic Control Unit, Model #FS2000. The Model FS2000 Control Unit contains no detection zones and will require the addition of either Option X or Option XX. The FS2000 Control Unit requires a half module space in the system enclosure.

Next, proceed directly to Step 2 and follow the ordering instructions. As part of Step 2, be sure to include Option X or Option XX and specify the quantity of modules necessary to provide the appropriate number of 3-wire Dual Temperature TRI-Wire™ zones required for the entire system.

Configuration 2 System will contain all Standard 2-wire Detection Zones or a Combination of 2-wire and Dual Temperature 3-wire Zones.

Begin the ordering process at Step 1A. Select the Basic Control Unit which contains the required number of standard 2-wire detection zones.

Proceed to Step 2 and continue the ordering process as instructed. As part of Step 2, be sure to include Option X or Option XX and specify the quantity of modules necessary to provide the appropriate number of 3-wire Dual Temperature TRI-Wire™ zones.

Step 1A Determine the number of 2-wire detection zones required, and select the appropriate system control unit from the models shown in the table below.

Basic 2-Wire System Control Units

| Model # | Enclosure | |
|---------|---------------|-------------|
| | Module Spaces | Description |
| FS2002 | 1 | 2 zones |
| FS2004 | 1½ | 4 zones |
| FS2006 | 2 | 6 zones |
| FS2008 | 2½ | 8 zones |
| FS2010 | 3 | 10 zones |
| FS2012 | 3½ | 12 zones |
| FS2014 | 4 | 14 zones |
| FS2016 | 4½ | 16 zones |
| FS2018 | 5 | 18 zones |
| FS2020 | 5½ | 20 zones |
| FS2022 | 6 | 22 zones |
| FS2024 | 6½ | 24 zones |
| FS2026 | 7 | 26 zones |
| FS2028 | 7½ | 28 zones |
| FS2030 | 8 | 30 zones |
| FS2032 | 8½ | 32 zones |
| FS2034 | 9 | 34 zones |

Add ½ module space for each additional 2 zones.

Step 2 Select option code letter(s) from the “System Configuration Guide” section of this catalog sheet and show quantity when necessary. Note options which require enclosure module space(s).

Step 3 To determine the proper size system enclosure, add the module spaces required for the basic control unit (Step 1 or 1A) plus the module spaces required for the quantity of each option selected (Step 2). If the total module spaces required for the system exceed the size of the largest enclosure, a second extender enclosure will be required. Select two enclosures whose total module capacity equals or exceeds that required for the complete system.

Step 4 Finalize complete system model number as shown in the System Configuration Guide, Section D.

Step 5 Each 2000 Series Control Panel is custom assembled and tested at the factory as a complete system. In order to ensure conformance with each customer's operational requirements, every order should be accompanied by a brief description of the panel's operating logic and zone functions.

* Not all options are both UL Listed and FM Approved. Consult factory for details.

System Configuration Guide

A. Model number of basic system control unit selected in Step 1 or 1A.

Specify AC input voltage: **120** or **240VAC**

Specify battery charger adjustment code: **GC** - Gel Cell (Std.)
NC - Nickel
 Cadmium

B. Options Encl. mod. space

| | | | |
|---------|-----|--|---------------------|
| A | - | Protectowire alarm point location meter PDM-1000-1 | |
| B | 1 | 8 zone alarm scanner | } Requires Option A |
| C | 1 | 16 zone alarm scanner | |
| C2 | 1 | 32 zone alarm scanner | |
| D | 1/2 | Water flow detection zones (2/card) | |
| E | 1/2 | Switch supervisory circuits Class A/B (2 circuits/module) | |
| G | 1 | Solenoid monitor and release module w/ Class B switch supervisory (2 release and 2 supervisory circuits/module) | |
| GG | 1 | Solenoid monitor and release module for Star Model D w/ Class B switch supervisory (2 release and 2 supervisory circuits/module) | |
| H | - | Intrinsic safety barrier for Class B, 2-wire detection circuits | |
| (1-2) | 0 | (Option not available with system | |
| (3-16) | 1 | ground fault detection) | |
| (17-32) | 2 | Determine module space based upon zone qty. shown in brackets. | |
| J | - | Intrinsic safety barriers for Class B, TRI-Wire detection circuits (2/zone) | |
| (1-2) | 0 | (Option not available with system | |
| (3-8) | 1 | ground fault detection) | |
| (9-16) | 2 | Determine module space based upon zone | |
| (17-24) | 3 | qty. shown in brackets. | |
| K | - | DC isolator for Class B, 2-wire detection circuits | |
| (1-2) | 0 | (Not compatible with Option A) | |
| (3-8) | 1 | Determine module space based upon zone | |
| (9-16) | 2 | qty. shown in brackets. Note: Not FM Approved | |
| (17-24) | 3 | for use with Option X. | |
| (25-32) | 4 | | |
| L | - | Auxiliary zone alarm relay - SPDT | |
| LL | - | Auxiliary zone alarm relay - DPDT | |
| M | - | Municipal tie unit (series type - requires Option E) | |
| N | - | Municipal tie unit (shunt type) | |
| P | - | Battery charging meters | |
| Q | - | Time delay relay | |
| R | - | Auxiliary common alarm relay - DPDT | |
| RR | - | Auxiliary relay module - 8-SPDT relays (1 amp @ 24 VDC) | |
| S | - | Auxiliary common trouble relay - DPDT | |

| | | |
|----|-----|--|
| T | - | Class A (NFPA Styles X & Z) audible circuits (main panel, general alarm only) |
| U | 1/2 | Audible expander card (1 circuit, Class A or B) |
| V | - | Zone voting module |
| W | - | PS-91 auxiliary power supply |
| X | 1/2 | Dual temperature detection zones Class B (2 zones/module) |
| XX | 1/2 | Dual temperature detection zone Class A (1 zone/module) |
| Y | - | PS-95 power conditioning module |
| Z | - | Door mounted, key operated, control switches (reset, alarm silence, trouble/supervisory silence & lamp test) |

C. Enclosures

| | | |
|-------|---------------------------|--------------------|
| EN2 | 2 module enclosure | |
| EN4 | 4 module enclosure | |
| EN6 | 6 module enclosure | |
| EN9 | 9 module enclosure | |
| EN12 | 12 module enclosure | |
| LTi2X | Industrial Type NEMA 4X | 2 module enclosure |
| LTi4 | Industrial Type NEMA 4/12 | 4 module enclosure |
| LTi6 | Industrial Type NEMA 4/12 | 6 module enclosure |
| LTi9 | Industrial Type NEMA 4/12 | 9 module enclosure |

D. Example of complete system model number. Note that the quantity of each option ordered is shown after its Option Code Letter.

FS2004-120-GC-G2X2-EN6

Control panel with four 2-wire detection zones operating on 120VAC 50-60Hz input & gel cell battery backup; (2) solenoid monitor and release modules w/Class B switch supervisory (2 release & 2 supervisory ckts./module); (2) Dual Temperature 3-wire detection modules (4 Class B zones, 2/module), all in a six (6) module beige enclosure.

The Protectowire Co., Inc.

Post Office Box 200, Hanover, MA 02339-0200 U.S.A.
 781-826-3878, Fax 781-826-2045

Web: <http://www.protectowire.com>
 e-mail: pwire@protectowire.com

Special hazard fire detection systems